



**MANUAL DE INSTRUCCIONES**  
**SECADOR**  
**SE-23701C**



**ESTIMADO CLIENTE**

¡Felicitaciones por su compra!

Por favor lea cuidadosamente este manual y guárdelo para su futura referencia.

Si necesita soporte adicional no dude en escribir a: [info@premiermundo.com](mailto:info@premiermundo.com)

## ÍNDICE

INTRODUCCIÓN .....	2
INSTRUCCIONES DE SEGURIDAD .....	2
DESCRIPCIÓN .....	2
INSTRUCCIONES DE OPERACIÓN .....	3
CHORRO FRÍO .....	3
EMISIÓN DE IONES .....	3
MANTENIMIENTO .....	3
LIMPIEZA .....	3
DIAGRAMA DE CIRCUITOS .....	4

	<b>PRECAUCIÓN</b>	
<b>RIESGO DE CHOQUE ELÉCTRICO, NO ABRA</b>		
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
  	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.</p> <p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	

## LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

### NOTA

Nos reservemos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso con el fin de continuar las mejoras y desarrollo del mismo.

## INTRODUCCIÓN


Con el fin de que obtenga el mayor desempeño de su secador por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo.

## INSTRUCCIONES DE SEGURIDAD

- Desconecte siempre la unidad después de utilizarla.
- No la utilice mientras se baña.
- No la deje en una ubicación donde pueda caerse al sanitario o al lavamanos.
- No la sumerja en el agua ni en ningún líquido.
- Si llega a caer dentro del agua, por ningún motivo intente recogerla. Desconéctela de inmediato.
- Mantenga su atención en la unidad cuando la esté utilizando.
- Mantenga estricta supervisión si se utiliza la unidad en o cerca de niños, personas con discapacidad o personas de la tercera edad.
- Utilice esta unidad para el propósito que ha sido diseñada.
- No use la unidad si observa que el cable tiene algún daño, si no está funcionando o ha caído en un recipiente con agua. Remítase a un centro de servicio autorizado para revisión y reparación.
- Mantenga el cable alejado de fuentes de calor.
- No bloquee la de aire ni la coloque sobre una superficie donde se puedan bloquear, como por ejemplo, la cama y el sofá.
- No la utilice mientras duerme.
- No introduzca objetos dentro de la unidad.
- Evite dirigir el aire caliente hacia los ojos y otras partes sensibles del cuerpo.
- Los accesorios pueden calentarse durante la operación. Permita que se enfríen para manipularlos.
- Para protección adicional en cuanto a electricidad se recomienda instalar un dispositivo de corriente residual (RCD) que no exceda los 30 mA. Consulte a un electricista para este procedimiento

## DESCRIPCIÓN

1. CONCENTRADOR
2. CUERPO
3. REJILLA DE ENTRADA DE AIRE
4. BOTÓN DE CHORRO FRÍO
5. INTERRUPTOR
6. MANIJA
7. GANCHO DE COLGAR
8. DIFUSOR GRANDE

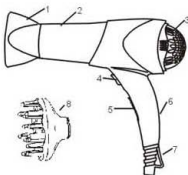

## INSTRUCCIONES DE OPERACIÓN

1. Asegúrese de que la unidad está en la posición "0" antes de conectarla al tomacorriente.
2. Utilice la potencia alta para secar el cabello y la baja para crear un estilo.
3. Si debe detener el secador por alguna razón, apáguelo y permita que se enfríe.
4. El ajuste de potencia es como sigue:

Posición 0:	Apagado
Posición 1:	Potencia media, temperatura media para secado suave y creación de estilo.
Posición 2:	Potencia alta, temperatura alta para secado rápido.

## CHORRO FRÍO

Con esta función, al presionar el botón, se interrumpe el proceso normal de calentamiento de tal forma que el aire pueda ser mezclado de acuerdo a las necesidades individuales.

## EMISIÓN DE IONES

Este secador cuenta con la mejor tecnología de iones la cual emite iones negativos mientras seca su cabello con el fin de eliminar la electrostática de su cabello y dar un acabado mucho más suave.

## MANTENIMIENTO

- Mantenga el secador limpio para un buen funcionamiento.
- No bloquee la salida de aire para evitar el sobrecalentamiento.
- El secador no requiere ningún tipo de lubricante.
- Recuerde que no hay partes internas para ser manipuladas por el usuario. Cualquier revisión o reparación que necesite debe ser hecha por personal técnico autorizado.
- Mantenga en buen estado el cable de poder; no lo doble ni lo enrolle alrededor del secador para guardarlo, ni permita que el secador cuelgue de él.
- Estire el cable antes de comenzar a utilizar el secador.
- Guarde el secador en lugar seguro y seco, fuera del alcance de los niños.

## LIMPIEZA


5. Desconecte la unidad antes de limpiarla.
6. Utilice una prenda húmeda suave y pásela por encima.
7. Evite utilizar productos químicos como benzina, tiner o alcohol que pueden dañar el acabado del secador.
8. Retire los cabellos que pueden quedar atrapados en la boquilla con una aspiradora o manualmente. Si el filtro de esta área está muy sucio el secador puede sobrecalentarse.



### NOTA

Nunca introduzca el secador en agua para limpiarlo.

## DIAGRAMA DE CIRCUITOS

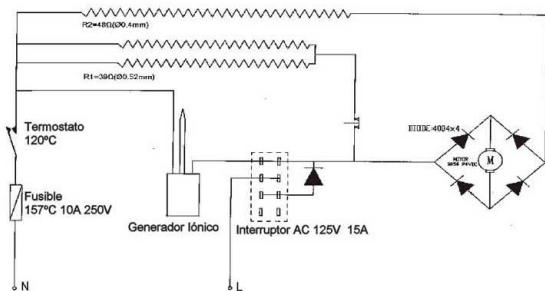

**Voltaje** AC 120V/60Hz  
**Potencia** 1800 Vatios



**INSTRUCTION MANUAL  
HAIR DRYER  
SE-2370IC**



**DEAR COSTUMER**

Thank you for your purchase!

Please read carefully this manual and keep for your future reference.

If you need additional support please write to: [info@premiermundo.com](mailto:info@premiermundo.com)



## HOW TO USE

1. Always ensure the switch is set to "0" position before plugging the unit the power outlet.
2. Use the high setting for drying hair, and use low setting for styling.
3. Should the hair dryer stop for any reason, turn it off at once and let it cool down.
4. Adjust the desired blowing strength:
  - Position 0: OFF
  - Position 1: Half power, medium temperature for gentle drying and styling
  - Position 2: Full power, high temperature for quick drying

### Cool shot:

With this switch it is possible to interrupt the heating process so that the air can be mixed according to individual requirements.

### Ionic:

This appliance is supplied with the device **IONIC Technology**, which emits negative ions during the drying. It can help to eliminate the electrostatic loads from the hair, to get soft style result

## USER MAINTENANCE INSTRUCTION

This hair dryer maintenance is free, no consumption or lubrication is needed. Keep this appliance clean for proper operating. Never block or clog air intakes, otherwise overheated will happen. The appliance has no user serviceable parts, any other servicing should be performed by an authorized service representative or a professional center. Never allow the supply cord to be twisted, pulled, bent, or wrapped around the dryer. If the cord is twisted, to untwist the cord before use. When not in use, this appliance should be stored in a safe, dry location, out of reach of children.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER**

**DANGER**—As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electrical shock:





1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

**WARNING**—To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.

2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
6. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
8. Never use while sleeping.
9. Never drop or insert any object into any opening or hose.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use an extension cord with this appliance.
12. Do not direct hot air toward eyes or other heat sensitive areas.
13. Attachments may be hot during use. Allow them to cool before handling.
14. Do not place appliance on any surface while it is operating.
15. While using the appliance, keep your hair away from the air inlets.
16. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK, DO NOT OPEN</b>	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

## PREMIER CUSTOMER SERVICE


<b>Venezuela:</b>	0800 – ELECTRIC (353-2874)
<b>Colombia:</b>	01-900-331-PEJC (7352)
<b>Panama:</b>	300-5185
<b>Website:</b>	<a href="http://www.premiermundo.com">www.premiermundo.com</a>
<b>E-mail:</b>	<a href="mailto:servicioalcliente@premiermundo.com">servicioalcliente@premiermundo.com</a>

## NOTE


This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

## NAME OF PARTS

1. Concentrator nozzle
2. Barrel
3. Air inlet grill
4. Cool shot knob
5. Switch
6. Handle
7. Hanging loop
8. Big diffuser

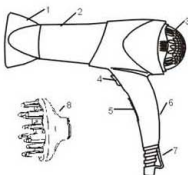

# CIRCUIT DIAGRAM

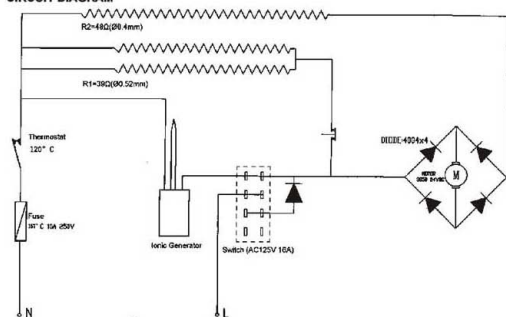

**Voltage** AC 120V/60Hz  
**Power** 1800 W